


Volkswagen DQ381 Wiring

Connection using Factory Mode

Attention

You cannot use OBD Flash files to write into the ECU

You don't need to open DQ381 cover in this factory mode. Please connect wires as described below

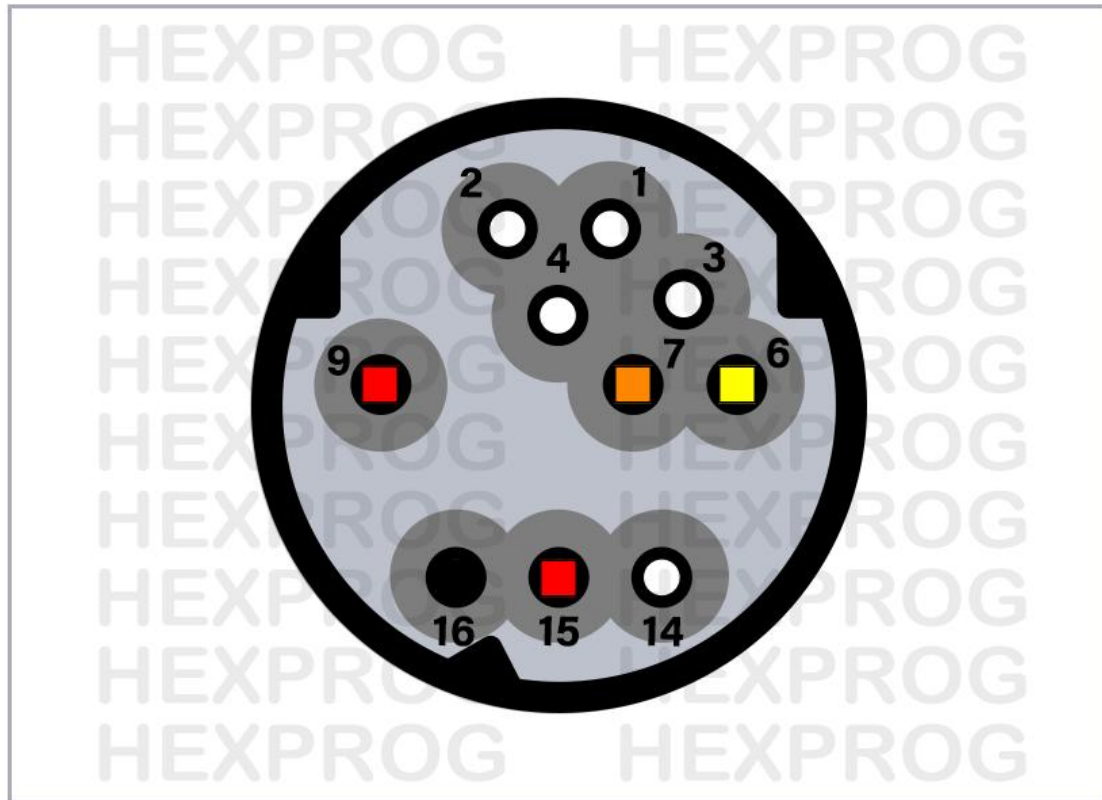

Pins Description

- Block1-Pin 15: Power Supply 12-14V
- Block1-Pin 16: Ground
- Block1-Pin 6: CANBUS High 2
- Block1-Pin 7: CANBUS Low 2
- Block1-Pin 9: Power Supply 12-14V

