

Hyundai CPEGD 2.20.1 Wiring

Connection using Boot Mode


Attention

You cannot use OBD Flash files to write into the ECU



Hyundai-CPEGD 2.20.1-Module

You need to open CPEGD 2.20.1 cover in boot mode. Please connect wires as described below

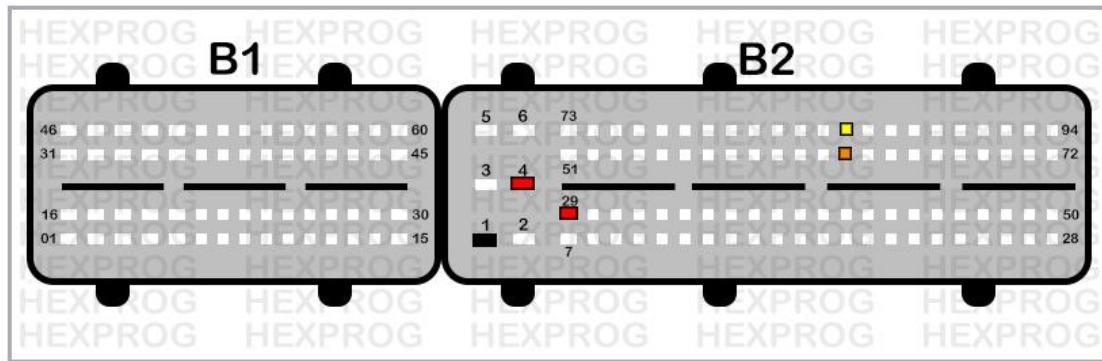

Pins Description


- Block2-**Pin 1**: Ground
- Block2-**Pin 29**: Power Supply 12-14V
- Block2-**Pin 4**: Power Supply 12-14V
- Block2-**Pin 63**: CANBUS Low 2
- Block2-**Pin 85**: CANBUS High 2

Internal Wiring

Connect HexProg signals wires to CPEGD 2.20.1 board as shown below



Hyundai-CPEGD 2.20.1-Inside

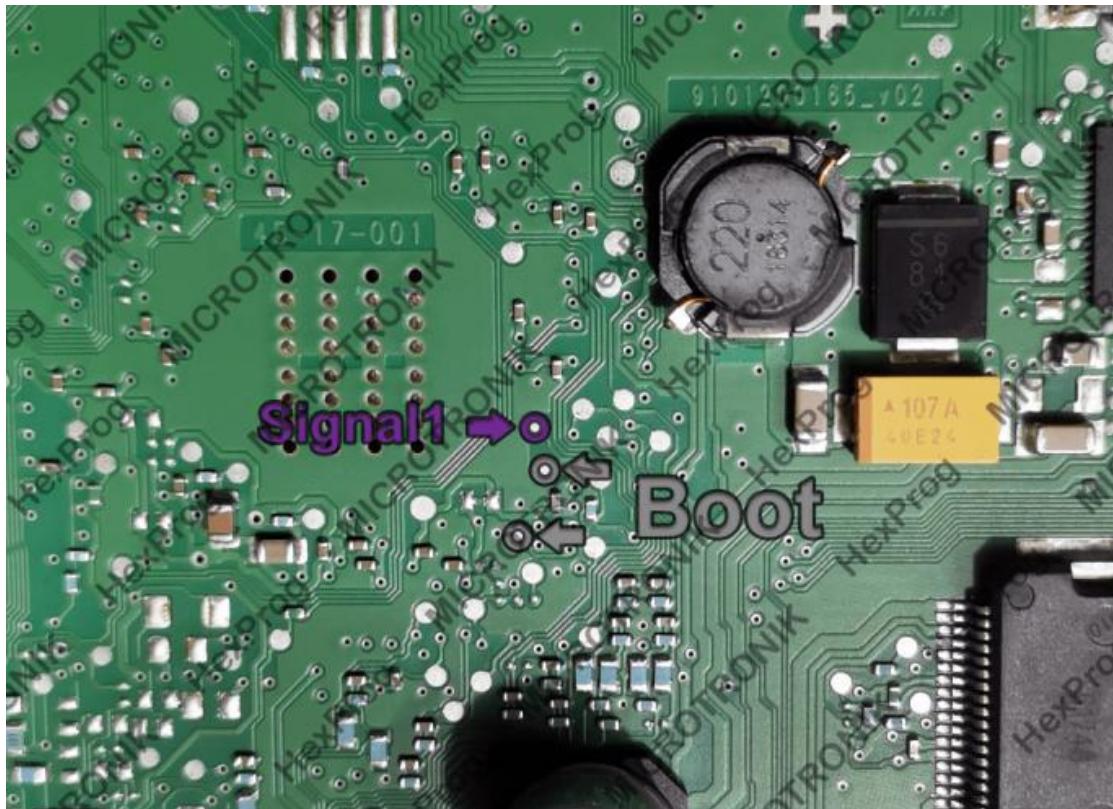

Hyundai-CPEGD 2.20.1-Boot-Location