

Hyundai CPGDSH2.26.1 Wiring

Connection using Boot Mode


Attention

You cannot use OBD Flash files to write into the ECU



Hyundai-CPGDSH2.26.1-Module

You need to open CPGDSH2.26.1 cover in boot mode. Please connect wires as described below

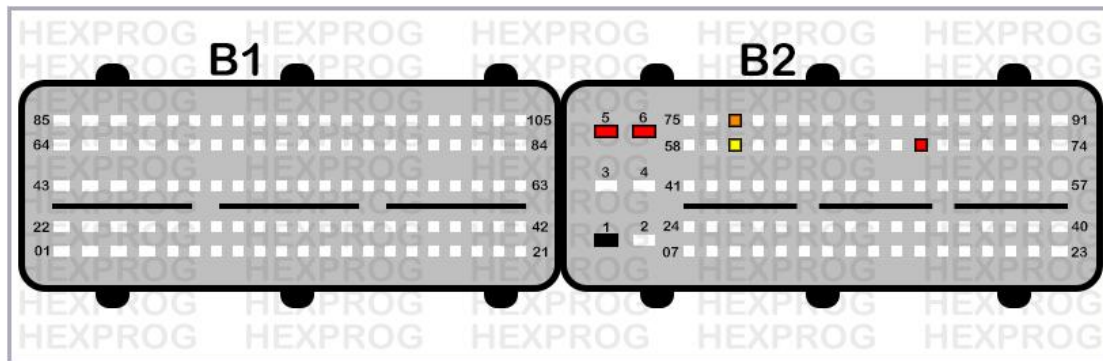

Pins Description


- Block2-**Pin 1**: Ground
- Block2-**Pin 5**: Power Supply 12-14V
- Block2-**Pin 6**: Power Supply 12-14V
- Block2-**Pin 60**: CANBUS High 2
- Block2-**Pin 68**: Power Supply 12-14V
- Block2-**Pin 77**: CANBUS Low 2

Internal Wiring

Connect HexProg signals wires to CPGDSH2.26.1 board as shown below



Hyundai-CPGDSH2.26.1-Inside

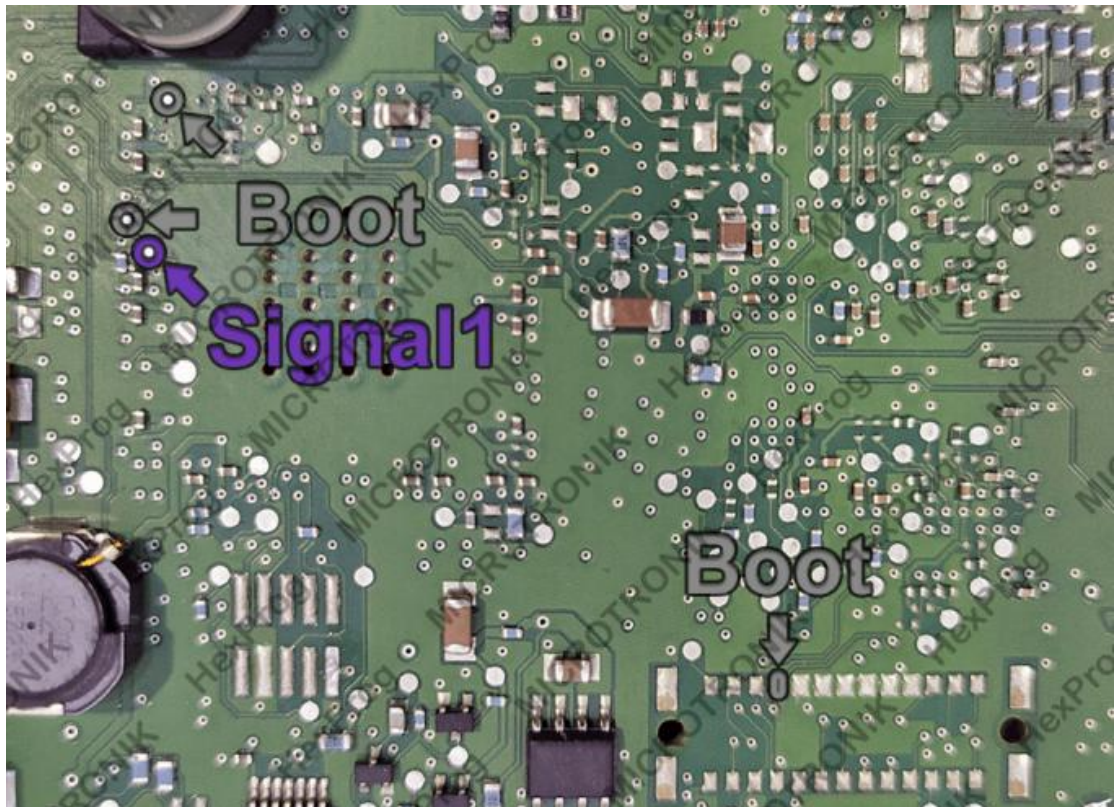

Hyundai-CPGDSH2.26.1-Boot-Location