### Toyota EDC17C47 Wiring


### **Connection using Factory Mode**

## Attention

# You cannot use OBD Flash files to write into the ECU

You don't need to open EDC17C47 cover in this factory mode. Please connect wires as described below


### **Option 1**

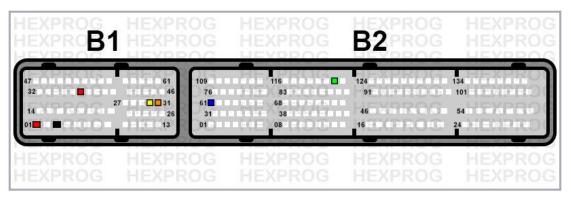

**Pins Description for Option 1** 

- Block 1-Pin 1: Power Supply 12-14V
- Block 1-Pin 3: Ground
- Block 1-Pin 30: CANBUS High 2
- Block 1-Pin 31: CANBUS Low 2
- Block 1-Pin 37: Power Supply 12-14V
- Block 2-Pin 121: Clock 2 Signal
- Block 2-Pin 61: Clock 1 Signal

### Option 2

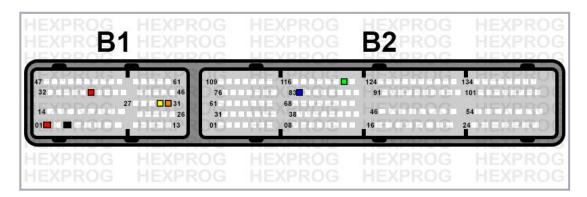

#### **Pins Description for Option 2**

- Block 1-Pin: 1 Power Supply 12-14V
- Block 1-Pin: 3 Ground
- Block 1-Pin: 30 CANBUS High 2
- Block 1-Pin: 31 CANBUS Low 2
- Block 1-Pin: 37 Power Supply 12-14V
- Block 2-Pin: 121 Clock 2 Signal
- Block 2-Pin: 83 Clock 1 Signal